




# INSTALLER CHEAT SHEET

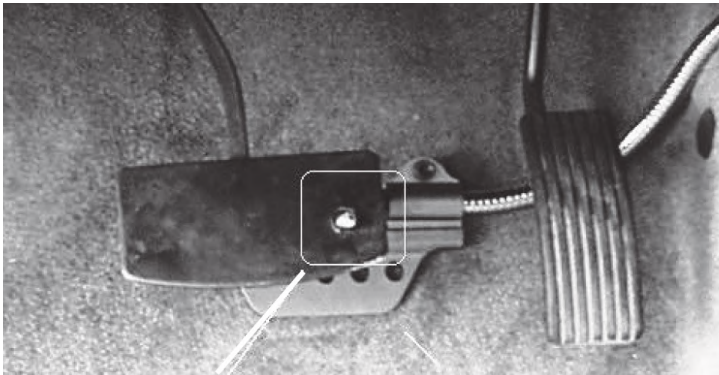


### Swivel Pulley Assembly (driver side)

Fasten with one bolt; or two self-tapping screws (use lock washers and drill with a 3/8" socket). Utilize ratchet wrench to **finish tightening self tapping screws so as not to strip.**


### Cable

- 1) Remove rubber brake pad cover.
- 2) Drill small, recessed hole.
- 3) Thread cable through hole until it catches on ball stop.
- 4) Replace rubber cover

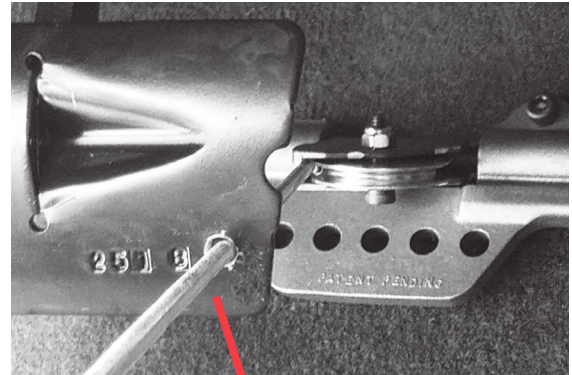

Here is an easy way to align the cable with the pulley. Simply run a straight rod through the hole on the driver's side brake pedal and into the back of the pulley where the cable would run.

**Caution**  
If your vehicle is equipped with adjustable gas and brake pedals, **disable feature** prior to adjusting cable lock block.

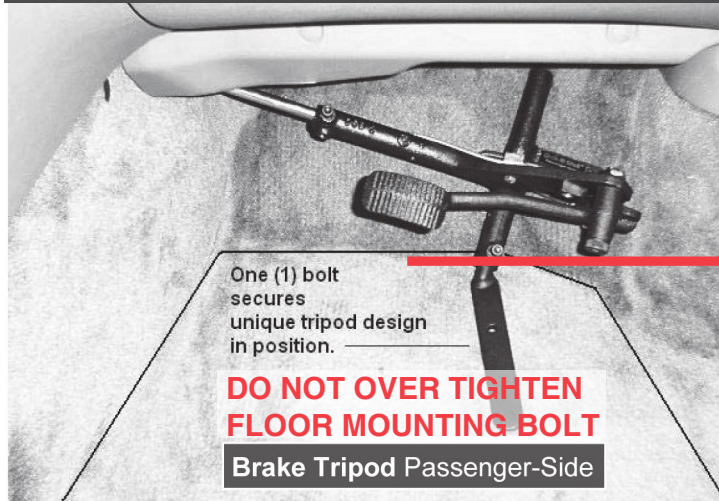

One (1) bolt secures unique tripod design in position.

**DO NOT OVER TIGHTEN FLOOR MOUNTING BOLT**

**Brake Tripod Passenger-Side**

### IMPORTANT Brake Pedal Adjustment

Position brake pedal horizontally, or *slightly* above.

Adjust height by releasing cable lock-block to free cable.

The instructor should be able to pivot from foot rest to brake without lifting the heel from the floor.

